


Value Super Filter Max Installation Manual



Barrie, Ontario, Canada, L4N 4Y8

www.excaliburwater.com

EXCALIBUR VALUE SUPER FILTER MAX INSTALLATION MANUAL

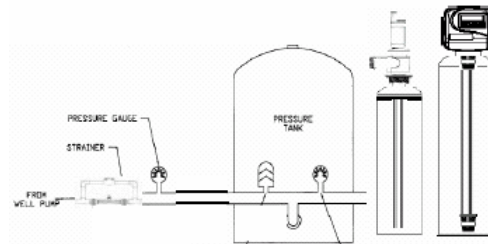

INSTALLATION PROCEDURES:

The Value Super Filter Max control valve, fittings and chemical free bypass are designed to accommodate minor plumbing misalignments.

Do not use Vaseline, oils, hydrocarbon lubricants or spray silicone on the Value Super Filter Max. A silicon lubricant may be used on back o rings of the Value Super Filter Max but not necessary. Avoid any type of lubricants, including silicone on the Value Super Filter Max red or clear lip seals.

The Value Super Filter Max nuts and caps are designed to be unscrewed or tightened by hand or with the special Value Super Filter Max wrench if necessary. Pliers can be used on the Value Super Filter Max control valve to unscrew the nut or cap. Do not use a pipe wrench to tighten or loosen Value Super Filter Max control valve nuts or caps. Do not place screwdriver in slots on caps and/or tap with a hammer on the Value Super Filter Max control valve.

Do not use pipe dope or other sealants on Value Super Filter Max threads. Teflon tape must be used on the Value Super Filter Max control valve threads of the 1" NPT elbow or 1/4" NPT connection and on the threads for the drain line connection. Teflon tape is not necessary on the Value Super Filter Max nut connection or caps because of o ring seals.

All plumbing should be done in accordance with local plumbing codes. The pipe size for Value Super Filter Max drain line should be

a minimum of ½ inch. When the backwash flow rates for the Value Super Filter Max in excess of 7GPM or length in excess of 20 feet require ¾ inch drain line.

Solder joints near the Value Super Filter Max drain must be done prior to connecting the drain line flow control fitting. Leave at least 6 inches between the Value Super Filter Max drain line control fittings and solder joints when soldering pipes that are connected on the drain line control fitting. Failure to do this could cause interior damage to the Value Super Filter Max control valve drain line flow control fitting.

When assembling the installation/fitting package for the Value Super Filter Max (inlet and outlet) connect the fitting to the plumbing system first and then attach the nut, split ring or o ring from the Value Super Filter Max control valve. Heat from soldering or solvent cements may damage the Value Super Filter Max nut, split ring or o ring. The solder joints should be cool and solvent cements should be set before installing the Value Super Filter Max control valve nut, split ring and o ring. Avoid getting primer and solvent cement on the Value Super Filter Max control valve on any part of the o rings, split rings, bypass valve or control valve.

Value Super Filter Max to be plugged into an electrical outlet. All electrical connections must be connected in accordance with local electrical codes.

Install grounding strap on metal pipes, one end on inlet and the end to outlet (copper).

Note: The air injection valve must be installed between the existing pump and pressure tank following the black arrow indicating flow direction. After the pressure tank install the contact air release tank and then the backwashable Iron Filter supplying treated water to your household.

INSTALLING FITTING ASSEMBLIES:

Value Super Filter Max control valve installation fittings connect to the control valve or the bypass valve using nuts that only require hand

tightening. Hand tighten Value Super Filter Max nut connections between Value Super Filter Max control valve and installation fittings, control valve and bypass valve and bypass valve and installation fittings allows for easy serviceability. Do not use a pipe wrench to tighten Value Super Filter Max nuts on installation fittings. Hand tighten only.

Value Super Filter Max split ring retainer holds the nut on and allows load to be spread over the entire nut surface area reducing the chance for leakage with the Value Super Filter Max. The split ring design, incorporated into the installation fittings allows approximately 2 degrees off axis alignment to the plumbing system. The Value Super Filter Max installation fittings are designed to accommodate minor plumbing misalignments.

Value Super Filter Max control valve slip the nut onto the fitting first, then the split ring second and the o ring last. Hand tighten the nut. If the fitting is leaking, tightening the nut will not stop the leak. Remove the Value Super Filter Max nut, fitting and check for damage or misalignment of the o ring.

Do not use pipe dope or other sealants on the Value Super Filter Max threads. Teflon tape must be used on the Value Super Filter Max threads of the 1" NPT elbow and 1/4" NPT connections and on the threads for the drain line connection. Teflon tape is not necessary on the connection or caps because of the o ring seals.

BYPASS VALVE:

The Value Super Filter Max bypass valve easily connects to the Value Super Filter Max control valve body using nuts that only require hand tightening. Hand tighten nut connections between Value Super Filter Max control valve and fittings, Value Super Filter Max control valve and bypass valve and bypass valve and installation fittings allow for easy serviceability. On Value Super Filter Max do not use Vaseline, oils or other unacceptable lubricants on o-rings. A silicon lubricant may be used on black o rings. All seals are self lubricating EPDM for long life lubricating qualities.

NOTE: Quick connect 1" NPT nut will fit around a 3/4" copper elbow.

Excalibur Super Filter Max System Setup:

Super Filter Max system setup choose the time for the Super Filter Max on the cycles selected in cycle sequence and specifies the Super Filter Max other operating parameters for the Super Filter Max System. The upper and lower limits for the Super Filter Max of the allowable values for the cycles are as follows:

Super Filter Max	Options	Units	Lower/Upper Limit
Super Filter Max	Backwash	Minutes	14
Super Filter Max	Rinse (fast)	Minutes	8

Step 1:

On the Super Filter Max press set hour and up buttons simultaneously for 3 seconds and release on the Super Filter Max. Then press again on the Super Filter Max the set hour and up buttons simultaneously for 3 seconds then release.

Step 2:

On the Super Filter Max select P9 using the up or down arrows. On the Super Filter Max press the set hour button to go to step 3.

Step 3:

On the Super Filter Max P9 is selected dashes will appear for minutes of fill. Then on the Super Filter Max press set hour button to go to step 4.

Step 4:

On the Super Filter Max use the up or down buttons to select 99 days between regen. On the Super Filter Max press the set hour button to go to step 5.

Step 5:

On the Super Filter Max use the up or down buttons to switch between 60 hZ or 50hZ option. The Super Filter Max must be set for 60 hZ. Then on the Super Filter Max press the set hour button to go to step 6.

Step 6:

On the Super Filter Max if a differential pressure switch is installed and actuated on the Super Filter Max a regeneration will occur immediately. If no arrow points at regeneration hour, or a regeneration will occur at the delayed regeneration hour or a regeneration will occur at the delayed hour if an arrow points at regen hour. On the Super Filter Max use up or down buttons to switch between the two choices.

If a differential switch is not installed, the settings in this display are ignored. ON the Super Filter Max press the set hour to exit system setup.

Excalibur Water Systems Super Filter Max Programming Procedures:

General Operation:

When the Super Filter Max is filtering on two displays of the Super Filter Max two displays will be shown, time of day or days until the next regeneration of the Super Filter Max. When pressing up or down on the Super Filter Max will toggle between the two choices.

To set time of day:

When the Super Filter Max has a power outage time of day needs to be reset. All other information for the Super Filter Max will be stored in memory no matter how long the Super Filter Max has a power outage. Please complete the steps shown below to access this mode of the Super Filter Max press set hour.

Step I:

Super Filter Max accessed by pressing set hour.

Step II:

Super Filter Max adjust to the nearest hour using up or down on the Super Filter Max an arrow points to PM during PM hours.

Step III:

Press set hour on the Super Filter Max to complete and return to normal operation for the Super Filter Max.

To set time of regeneration:

Super Filter Max for initial setup or to make adjustments to the Super Filter Max, please complete the steps shown below for the Super Filter Max. To access this mode of the Super Filter Max by pressing set hour and up simultaneously for 3 seconds on the Super Filter Max.

Step I:

Super Filter Max accessed by pressing set hour and up simultaneously for 3 seconds on the Super Filter Max.

Step II:

On the Super Filter Max adjust time of regeneration hour by using the up or down buttons on the Super Filter Max. An arrow points to PM during PM hours on the Super Filter Max. Simultaneously press the hour and down button to return to normal for the Super Filter Max.

The user can initiate manual regeneration of the Super Filter Max. The user has the option to request Super Filter Max to have manual at the delayed regeneration time for the Super Filter Max or have the regeneration occur immediately for the Super Filter Max. On the Super Filter Max simultaneously press the up and down buttons on the Super Filter Max to start regeneration at the next delayed regeneration time. If the Super Filter Max regeneration is to occur today, an arrow will point to regeneration on the Super Filter Max.

For immediate regeneration simultaneously press and hold up and down buttons for 3 seconds on the Super Filter Max.

When Super Filter Max is in regeneration, step through the different regeneration cycles by pressing either up or down buttons on the Super Filter Max until complete and back to present time of day.

User please note:

Do not attempt to go further into Super Filter Max programming other than time of day or regeneration on the Super Filter Max unless you have a full and comprehensive understanding of the Super Filter Max programming and all features. Incorrect settings on the Super Filter Max may result in a labour service charge.

EXCALIBUR WATER SYSTEMS

Super Filter Max

Troubleshooting Guide

Problem	Possible Cause	Solution
1. Timer does not display time of day	a. Transformer unplugged	a. Connect power
	b. No electric power at outlet	b. Repair outlet or use working outlet
	c. Defective transformer	c. Replace transformer
	d. Defective PC board	d. Replace PC board
2. Timer does not display correct time of day	a. Switched outlet	a. Use uninterrupted outlet
	b. Power outage	b. Reset time of day
	c. Defective PC Board	c. Replace PC board
3. Control valve regenerates at wrong time of day	a. Power outages	a. Reset control valve to correct time of day
	b. Time of day not set correctly	b. Reset to correct time of day
	c. Time of regeneration incorrect	c. Reset regeneration time
4. E1, E2 or E3 E1-Unable to recognize start of regeneration E2-Unexpected stall E3-Motor ran to long, timed out trying to reach the next cycle position or trying to reach home position	a. Control valve has just been serviced	a. Press SET HOUR and DOWN for 3 seconds or unplug power source jack (black wire) from the circuit board and plug back in to reset control valve
	b. Foreign matter is lodged in control valve	b. Check piston and spacer stack assembly for foreign matter
	c. High drive forces on piston	c. Replace piston(s) and spacer stack assembly
	d. Control valve piston not in home position	d. Press SET HOUR and DOWN for 3 seconds or unplug power source jack (black wire) from the circuit board and plug back into reset control valve
	e. Motor not inserted fully to engage pinion, motor wires broken or disconnected, motor failure	e. Check motor and wiring. Replace motor if necessary
	f. Drive gear label dirty or damaged, missing or broken gear	f. Replace or clean drive gear
	g. Drive bracket incorrectly aligned to back plate	g. Reset drive bracket properly
	h. PC board is damaged or defective	h. Replace PC board
	i. PC board incorrectly aligned to drive bracket	i. Ensure PC board is correctly snapped on to drive bracket
5. Control Valve stalled in regeneration	a. Motor not operating	a. Replace motor
	b. No electric power at outlet	b. Repair outlet or use working outlet
	c. Defective transformer	c. Replace transformer
	d. Defective PC board	d. Replace PC board
	e. Broken drive gear or drive cap assembly	e. Replace drive gear or drive cap assembly
	f. Broken piston retainer	f. Replace drive cap assembly
	g. Broken main or regenerant piston	g. Replace main or regenerant piston

6. Control valve does not regenerate	a. Transformer unplugged b. No electric power at outlet	a. Connect transformer b. Repair outlet or use working outlet
automatically when UP and DOWN buttons are depressed and held	c. Broken drive gear or drive cap assembly d. Defective PC board	c. Replace drive gear or drive cap assembly d. Replace PC board
7. Control valve does not regenerate automatically but does when UP and DOWN buttons are depressed	a. Defective PC board b. Set-up error	a. Replace PC board b. Check control valve set-up procedure
8. Too much air in water (cloudy small air bubbles)		a. Check air – off tank. Risers in place b. Braukman valve on. c. check braukman valve internals – clean debris etc. out d. too much draw on intake (micronizer) adjust to 30% draw of pump cycle.
9. Smell and/or Iron bleeding thru		a. Check programming b. Air injection set properly c. Size of equipment correct
10. Smell <u>Hot</u> side only		a. Chlorinate hot tank b. Optional to remove anode rod. c. If condition persists check for sulphur reducing bacteria
		a. Unit backwashed thoroughly at install. (backwash now) b. Check backwash control c. Plugged backwash control d. Kinked drain line
11. Black or Grey water (cold side)		
12. Excessive noise during backwash		a. Fasten all lines
13. No air getting drawn into water		a. Check micronizer adjustments b. Not enough flow (check pump flow rate) c. Plugged air intake d. Pressure settings should be at 30-50 no higher. e. (lower the pressure – increase flow)
14. Particles in water (Media-Black)		a. Broken distributor or riser tube.

5 YEAR WARRANTY

Lifetime Tank Warranty

Value Super Filter Max

Thank you for your purchase of our VALUE SUPER FILTER MAX. For proof of purchase, please retain your Invoice/Sales Order Copy.

Warranty ~ Offered

Excalibur Water Systems warrants its products to be free from defect in materials and workmanship to the original owner from the date on the proof of purchase as described below.

Warranty ~ Working Procedures

If during the suitable warranty period, a part is defective, then Excalibur Water Systems will repair or replace that part at no charge to the original owner, with the exception of charges for nominal shipping, service and/or installation.

Warranty ~ Coverage Outlined

Excalibur Water Systems guarantees, to the original owner, a period of 5 years, the VALVE BODY to be free of defects in materials and workmanship and to perform its proper functions. To the original owner, a period of 5 years, the ELECTRONIC CONTROL VALVE as well as all parts to be free of defects in materials and workmanship and to perform their normal functions. To the original owner, the MINERAL TANK will not rust, corrode, leak, burst or in any other form fail to perform their proper functions for a LIFETIME period of 20 YEARS.

Warranty ~ Service

In the event you require service, your local Excalibur Water Systems Dealer will provide all necessary service and installation for your Value Super Filter Max. To obtain warranty service within 30 days of discovery of the defect, notification must be given to your local Excalibur Water Systems Dealer.

General Provisions

The above warranties are effective provided the VALUE SUPER FILTER MAX is operated at water pressures not exceeding 125psi and at water temperatures not exceeding 120°F; also provided that the Super Filter Max is not subject to abuse, misuse, alteration, neglect, freezing, accident or negligence; and provided further that the Super Filter Max is not damaged as the result of any unusual force of nature such as, but not limited to flood, hurricane, tornado or earthquake. Excalibur Water Systems is excused if failure to perform its warranty obligations is the result of strikes, government regulation, materials shortages or other circumstances beyond its control.

THERE ARE NO WARRANTIES ON THE SUPER FILTER MAX BEYOND THOSE SPECIFICALLY DESCRIBED ABOVE. ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE, ARE DISCLAIMED TO THE EXTENT THEY MIGHT EXTEND BEYOND THE ABOVE PERIODS. THE SOLE OBLIGATION OF EXCALIBUR WATER SYSTEMS UNDER THESE WARRANTIES IS TO REPLACE OR REPAIR THE COMPONENT OR PART PROVES TO BE DEFECTIVE WITHIN THE SPECIFIED TIME PERIOD AND EXCALIBUR WATER SYSTEMS IS NOT LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. NO DEALER, AGENT, REPRESENTATIVE OR OTHER PERSON IS AUTHORIZED TO EXTEND OR EXPAND THE WARRANTIES EXPRESSED ABOVE.

Certain provinces or states do not allow limitations on how long an implied warranty lasts or exclusions or limitations of incidental or consequential damage, therefore limitations and exclusions in this warranty may not apply to you. This warranty extends you specific legal rights as you may have other rights which vary from province to province or state to state.

Excalibur Water Systems is a manufacturer of water treatment products.

Barrie, ON
Canada



